902. ENGINE START CHECK LIST

VERIFY THE EMERGENCY ALTERNATOR SWITCH IS OFF
COMPLETE ENGINEERING DIESEL ENGINE PMS R-1D USING THE ENGINE LOG
SELECT THE ENGINE PERKO SWITCH TO ON, OBSERVING:
4 SECOND AUDIBLE RACOR ALARM ACCOMPANIED BY LIGHT (ON THEN OFF) HALON SYSTEM CHARGED LIGHT ON
VERIFY CLUTCH DISENGAGED, INCREASE THROTTLE TO 10:00 POSITION
ENERGIZE ENGINE ALARM ON SWITCHBOARD LISTENING FOR AUDIBLE ALARM
ENERGIZE ENGINE PREHEAT FOR 15 SEC
START ENGINE. CONFIRM ALTERNATORS ARE CHARGING THE BATTERIES, THEN REDUCE TO 1200 RPM FOR WARM-UP.
VERIFY OVERBOARD DISCHARGE
WARNING
SHOULD ENGINE FAIL TO START WITHIN 15 SECONDS, DISCONTINUE ALL STARTING ATTEMPTS AND REPORT THE CONDITION TO THE OIC.
DISCONTINUE ALL STARTING ATTEMPTS AND REPORT THE
DISCONTINUE ALL STARTING ATTEMPTS AND REPORT THE CONDITION TO THE OIC.
DISCONTINUE ALL STARTING ATTEMPTS AND REPORT THE CONDITION TO THE OIC. VERIFY OIL PRESSURE NLT 10 / NMT 50 PSI
DISCONTINUE ALL STARTING ATTEMPTS AND REPORT THE CONDITION TO THE OIC. VERIFY OIL PRESSURE NLT 10 / NMT 50 PSI VERIFY COOLANT TEMP NMT 190 DEGREES